

**S.** Det är lämpligt att denna information överlämnas till användaren av anläggningen.

**GB.** It is appropriate that this information is passed on to the user of the installation.

**D.** Diese Informationen sind für den Benutzer der Anlage vorgesehen.

**SF.** Tämä ohje on suositeltava luovuttaa.


## Montageanvisning Phenix LED Singel. Assembly instruction Phenix LED Singel.

**S.** Om armaturens kabel skulle skadas eller om armaturen inte fungerar som den ska, skall dessa komponenter kontrolleras/bytas av tillverkaren eller av tillverkaren utsedd person.

**GB.** If the luminaire cable is damaged or if the luminaire is not working properly, it shall exclusively be checked/replaced by the manufacturer or by the manufacturer designated person.



Upphängning för armatur är gjord efter standard byggmått.  
Suspension is made after the standard building measurements.

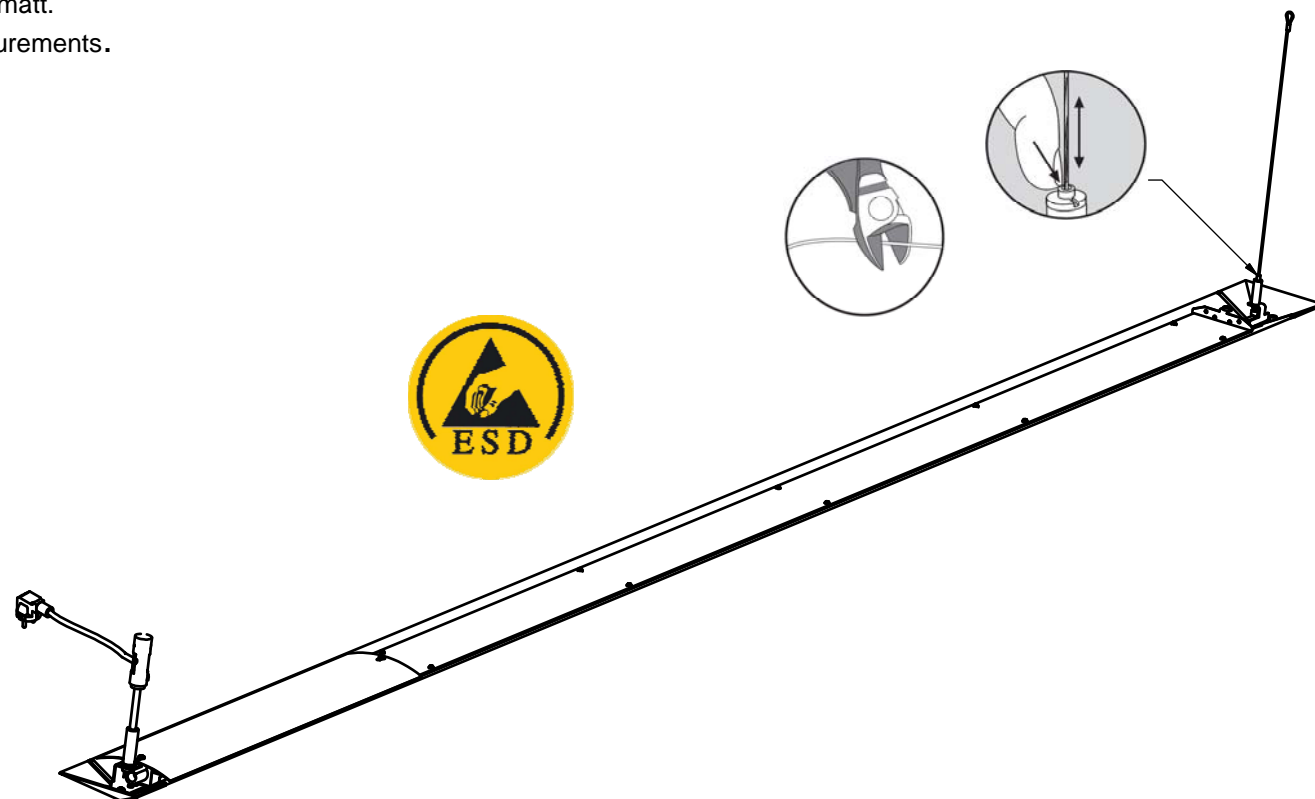

**atelje Lyktan**

SE-296 81 Åhus, Sweden

Tel: +46 44 28 98 00

Fax: +46 28 98 38

info@atelje-lyktan.se

www.atelje-lyktan.se

MA4230  
2014-02-12  
DEPE

## Antal armaturer per säkring/Number of luminaires on fuse

Phenix är utrustad med ett drivdon per armatur/En DALI adress per armatur (gäller för samtliga längder. I nedan tabell ser Ni hur många armaturer som ni kan koppla in på en säkring.

Phenix is equipped with one driver in each luminaire (same for all lengths). There is One DALI address for each luminaire. In below table you can see how many luminaires you can put on each fuse.

On/off or DALI	Driver	Fuse							
		C10	C13	C16	C20	B10	B13	B16	B20
DALI	LCAI 75W 100mA-400mA PRE	18	26	28	34	9	13	14	17
No	LCI 070/0300 I010 220-240 V	16	24	30	40	8	12	15	20